




GAZEBO TOP VIEW INSTALLATION INSTRUCTIONS

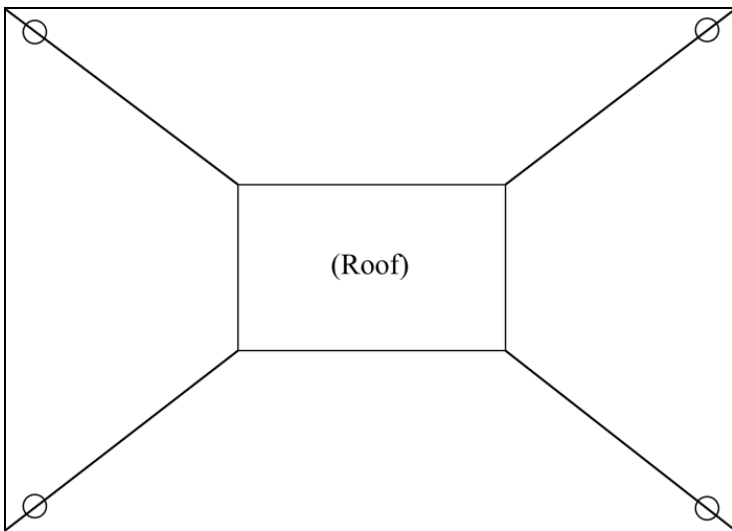

Tools Needed:

Hammer, Drill and/or Screwdriver

Suggestion:

In severe weather, we recommend that you remove the cover.

1. Lay canvas over the gazebo top in most obvious direction.
2. Position corners first, then smooth all sides until it lies nicely.
3. Valence should hang over edge of gazebo panels near the seam line sewn on the canvas.
4. Snaps are located at each corner as well as at intervals on each side.
5. Once canvas is positioned as you like it, locate corner snaps. Using hammer, tap down on the snap lightly. This will leave a gentle indentation on the wood.
6. Using drill/screwdriver, install wood screw into the wood over the indentation.
7. Snap corner in place. Move to opposite top corner making sure the canvas lies evenly. Secure tie downs for added protection. once corners are in place, you are ready to install the side screws.
8. Using the hammer and gentle tapping method, position the flap with the snap onto the wood making sure it is snug but **not tight** against the panel. It will be obvious to you where to place it.
9. Using a drill/screwdriver, install screw stud over the indentation. Snap into place and move on to the next flap.
10. Tie-downs are sewn into the canvas for added security. Tie these snug but **not tight** according to the particular style of your gazebo